

PERRY ISLAND SPB (PYL) 0 S UTC-9(-8DT) N60°41.12' W147°55.12'

ANCHORAGE

00 NOTAM FILE JNU

WATERWAY N-S: 10000X2000 (WATER)

COMMUNICATIONS: CTAF 122.9

RADIO AIDS TO NAVIGATION: NOTAM FILE JNU.

JOHNSTONE POINT (H) VORW/DME 116.7 JOH Chan 114 N60°28.86' W146°35.96' 270° 40.9 NM to fld.
48/18E.

wx cam

VOR unusable:

090°-124° byd 23 NM blo 8,000'

125°-188° byd 10 NM

DME unusable:

090°-124° byd 23 NM blo 12,000'

125°-191° byd 10 NM

PERRYVILLE (PEV)(PAPE) 1 SSW UTC-9(-8DT) N55°54.40' W159°09.65'

COLD BAY

30 B NOTAM FILE ENA

L-2K

RWY 02-20: 3300X75 (GRVL) MIRL

IAP

RWY 02: REIL. PAPI(P4L)—GA 3.4° TCH 28'. Hill.

RWY 20: Hill.

SERVICE: LGT ACTIVATE MIRL Rwy 02-20, PAPI Rwy 02, REIL Rwy 02, and rotating bcn—CTAF.

AIRPORT REMARKS: Unattended. Rwy condition not monitored, recommend visual inspection prior to using. Rwy 02-20 several ruts.

AIRPORT MANAGER: 907-246-3325

COMMUNICATIONS: CTAF 122.9

Ⓡ **ANCHORAGE CENTER APP/DEP CON** 125.35

RADIO AIDS TO NAVIGATION: NOTAM FILE SDP.

BORLAND NDB/DME (HW) 390 HBT Chan 79 N55°18.94'

W160°31.10' 041° 58.3 NM to fld. 130/11E.

NDB unusable:

304°-354° byd 16NM

DME unusable:

034°-134° byd 6NM

184°-264° byd 27 NM blo 14,000'


184°-264° byd 6 NM blo 10,000'

354°-034° byd 22 NM blo 18,000'

354°-034° byd 27NM

354°-034° byd 6 NM blo 10,000'

COMM/NAV/WEATHER REMARKS: For a local call to Cold Bay FSS dial 1-800-478-7250. For a toll free call to Kenai FSS dial 1-866-864-1737.

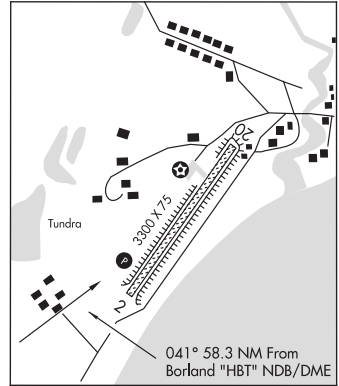

PETERS CREEK N62°19.86' W150°05.78' NOTAM FILE TKA.

ANCHORAGE

NDB (HW) 305 PEE at Talkeetna. 359/16E.

L-3D, 4F