

BEAVER (WBQ)(PAWB) 0 N UTC–9(–8DT) N66°21.73′ W147°24.39′ **FAIRBANKS**
365 B NOTAM FILE FAI **L–4J**
RWY 05–23: 3934X75 (GRVL–DIRT) MIRL **IAP**
RWY 05: Trees.
RWY 23: Trees.
SERVICE: **LGT** ACTIVATE MIRL Rwy 05–23 and rotating bcn—CTAF.
AIRPORT REMARKS: Unattended. Rwy cond not monitored, recommend visual inspection prior to landing. Snow removal ops dur winter–monitor CTAF. Active road transits rwy 1000′ from Rwy 05 thld.
AIRPORT MANAGER: (907) 451-5280
COMMUNICATIONS: CTAF 122.9
FORT YUKON RCO 122.05 (FAIRBANKS RADIO)
YUKON RIVER BRIDGE RCO 122.15 (FAIRBANKS RADIO)
RADIO AIDS TO NAVIGATION: NOTAM FILE FYU.
FORT YUKON (H) (H) VORTACW 114.4 FYU Chan 91 N66°34.46′ W145°16.60′ 237° 52.8 NM to fld. 449/20E.
VOR unusable:
001°–360° byd 15 NM
249°–259° byd 10 NM blo 4,900′
TACAN AZIMUTH unusable:
280°–300° byd 35 NM blo 2,500′
DME unusable:
280°–300° byd 35 NM blo 2,500′
COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1–866–248–6516.

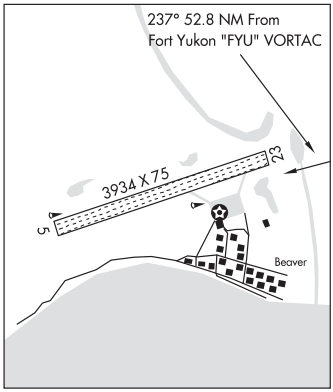

BEAVER LAKE SPB (See BIG LAKE on page 68)

BELUGA (BLG)(PABG) PVT UTC–9(–8DT) N61°10.38′ W151°02.72′ **ANCHORAGE**
87 NOTAM FILE Not insp. **H–1B, 2K, L–1A, 3D, 4F**
RWY 01–19: 5002X100 (GRVL) MIRL
RWY 01: Trees.
RWY 19: Trees.
RWY 09–27: 2505X60 (GRVL) MIRL 0.5% up W
SERVICE: **LGT** ACTVT MIRL Rwy 01–19 and Rwy 09–27—CTAF.
AIRPORT REMARKS: Attended continuously. Wildlife on and invof airport. Rwy 09–27 not mntnd in winter. Gtr than 20,000 lb and all ldg ops PPR—907–263–3930/907–263–3910. Rwys not visible by psnl. Unctld vehicle ops on road alg E side of rwys. W side of twy shoulder na byd rwy edge lights. Shoulder area on W and N side of rwys soggy. Rwy 19 first 200 ft soft and unstable. Road Xs adj to N end Rwy 19. Brush hinders vehicles fm seeing arr on apch end Rwy 19. Located 8 SM NE Tyonek.
AIRPORT MANAGER: 907-777-8300

CONTINUED ON NEXT PAGE

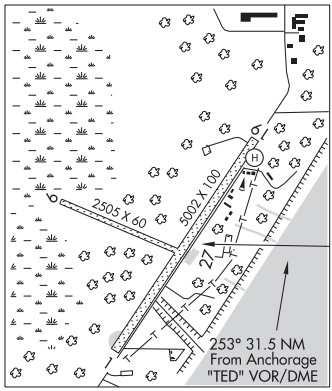

CONTINUED FROM PRECEDING PAGE

COMMUNICATIONS: CTAF/UNICOM 122.7

RADIO AIDS TO NAVIGATION: NOTAM FILE ANC.

ANCHORAGE (VH) (H) VORW/DME 113.15 TED Chan 78(Y) N61°10.07′ W149°57.61′ 253° 31.5 NM to fld. 93/18E.

VOR unusable:
010°–020° byd 40 NM
035°–039° byd 40 NM
040°–050° byd 40 NM blo 18,000′
041°–091° byd 25 NM blo 15,000′
051°–087° byd 40 NM
088°–098° byd 40 NM blo 18,000′
091°–096° byd 20 NM blo 15,000′
096°–121° byd 25 NM blo 12,500′
099°–108° byd 40 NM
109°–119° byd 40 NM blo 18,000′
120°–123° byd 40 NM
121°–146° byd 25 NM blo 9,000′
124°–134° byd 40 NM blo 10,000′
124°–134° byd 55 NM
135°–147° byd 40 NM
148°–158° byd 40 NM blo 9,000′
148°–158° byd 47 NM blo 12,000′
148°–158° byd 60 NM
159°–176° byd 40 NM
217°–220° byd 40 NM
289°–293° byd 40 NM blo 6,600′
289°–293° byd 64 NM blo 14,000′
294°–295° byd 40 NM

DME unusable:
041°–091° byd 25 NM blo 15,000′
091°–096° byd 20 NM blo 15,000′
096°–121° byd 25 NM blo 12,500′
121°–146° byd 25 NM blo 9,000′
196°–206° byd 25 NM blo 3,500′
206°–211° byd 25 NM blo 4,000′
211°–221° byd 25 NM blo 3,500′

VOR unusable:
310°–315° byd 40 NM
347°–349° byd 40 NM

COMM/NAV/WEATHER REMARKS: For a toll free call to Kenai FSS dial 1–866–864–1737.

HELIPAD H1: H60X60 (CONC)