

**TOGIAK** (TOG)(PATG) 0 SW UTC-9(-8DT) N59°03.21' W160°23.81'

19 B NOTAM FILE TOG

**RWY 03-21:** 4400X100 (GRVL-DIRT) MIRL

**RWY 03:** PAPI(P4L)—GA 3.0° TCH 25'. Road.

**RWY 21:** PAPI(P4L)—GA 3.0° TCH 31'.

**RWY 10-28:** 982X59 (GRVL)

**RWY 28:** Bldg.

**SERVICE:** LGT ACTIVATE PAPI Rwy 03 and Rwy 21, MIRL Rwy 03-21 and rotating bcn—CTAF.

**AIRPORT REMARKS:** Unattended. RWY COND not monitored, RCMD visual inspection prior to use. Waterfowl invof arpt during migration. Rwy 10-28 thld markers damaged or missing. Segmented circle damaged and overgrown with vegetation.

**AIRPORT MANAGER:** 907-842-5511

**WEATHER DATA SOURCES:** AWOS-3P 119.3 (907) 493-5326. (WX CAM)

**COMMUNICATIONS:** CTAF 122.5

RCO 122.25 (KENAI RADIO)

Ⓡ ANCHORAGE CENTER APP/DEP CON 132.75

**RADIO AIDS TO NAVIGATION:** NOTAM FILE TOG.

NDB/DME (HW) 393 TOG Chan 114 N59°03.83'

W160°22.54' at fld. 11/11E.

DME unusable:

225°-270° byd 32 NM blo 5,700'


271°-359° byd 32 NM blo 6,700'

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Kenai FSS dial 1-866-864-1737.

**KODIAK**

H-21, L-21, 3C

IAP

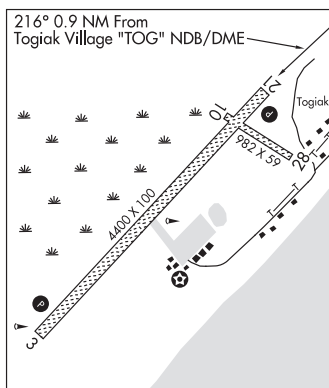

## ТОК

**ТОК 2** (8AK9) PVT 2 S UTC-9(-8DT) N63°18.00' W143°01.40'

1630 NOTAM FILE

**RWY 10-28:** 2035X80 (GRVL)

**RWY 10:** Trees.

**RWY 28:** Trees.

**AIRPORT REMARKS:** Unattended. Approach to Rwy 28 overflies abandoned arpt.

**COMMUNICATIONS:** CTAF 122.8

SUAIS 125.3 126.3 (1-800-758-8723)

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Northway FSS dial 1-800-478-6611. For a toll free call to Fairbanks FSS dial 1-866-248-6516.

**ANCHORAGE**

**ТОК JUNCTION** (6K8)(PFTO) 1 E UTC-9(-8DT) N63°19.77' W142°57.22'

1643 B NOTAM FILE ORT

**RWY 08-26:** H2509X50 (ASPH) MIRL

**RWY 08:** Trees.

**RWY 26:** Trees.

**SERVICE:** FUEL 100LL, JET A LGT Dusk-Dawn. ACTIVATE MIRL Rwy 08-26—CTAF.

**AIRPORT REMARKS:** Attended Mon-Fri 1700-0300Z±. 100LL self svc avbl 24 hrs with credit card. Ctc 907-883-5191 for Jet A. Pre heat and courtesy phone avbl. Recommend visual inspection prior to ldg, rwy plowed in winter. 198' AGL/1835' MSL tower located 4603' NW(302 azimuth) fm Rwy 08 thr. Rwy 08-26 nstd mks. Rwy numbers painted before rwy thlds. Thlds marked with cones and lgts.

**AIRPORT MANAGER:** 907-883-5128

**WEATHER DATA SOURCES:** AWOS-3P 118.1 (907) 269-2706. (WX CAM)

**COMMUNICATIONS:** CTAF/UNICOM 122.8

ТОК RCO 122.4 (NORTHWAY RADIO)

ANCHORAGE CENTER APP/DEP CON 126.55

SUAIS 125.3 126.3 (1-800-758-8723).

**RADIO AIDS TO NAVIGATION:** NOTAM FILE ORT.

**NORTHWAY (H) (H) VORTACW** 116.3 ORT Chan 110 N62°56.83'

W141°54.76' 293° 36.5 NM to fld. 1779/17E.

TACAN AZIMUTH unusable:

342°-037° byd 30 NM blo 10,500'

DME unusable:

342°-037° byd 30 NM blo 10,500'

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Northway FSS dial 1-800-478-6611. For a toll free call to Fairbanks FSS dial 1-866-248-6516.

**ANCHORAGE**

L-1A, 3E

IAP

