

TETLIN (3T4) 1 S UTC–9(–8DT) N63°07.48′ W142°31.11′ **ANCHORAGE**
1671 B NOTAM FILE ORT **L–1A, 3E**
RWY 08–26: 3300X75 (GRVL) MIRL
RWY 08: Brush.
RWY 26: Brush.
SERVICE: **LGT** ACTVT MIRL Rwy 08–26 —CTAF.
AIRPORT REMARKS: Unattended. Rwy cond unmnt, rcmd visual insp bfr use. Skis not rcmdd.
AIRPORT MANAGER: 907-883-5128
COMMUNICATIONS: CTAF 122.9
RADIO AIDS TO NAVIGATION: NOTAM FILE ORT.
NORTHWAY (H) (H) VORTACW 116.3 ORT Chan 110 N62°56.83′ W141°54.76′ 286° 19.7 NM to fld. 1779/17E.
TACAN AZIMUTH unusable:
342°–037° byd 30 NM blo 10,500′
DME unusable:
342°–037° byd 30 NM blo 10,500′
COMM/NAV/WEATHER REMARKS: For a toll free call to Northway FSS dial 1–800–478–6611.

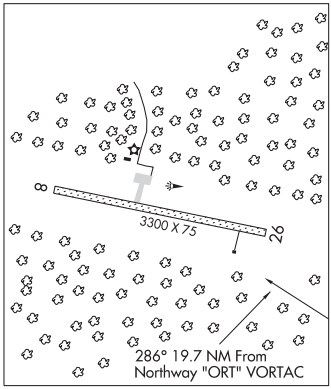

THOMPSON PASS (See VALDEZ on page 273)

THORNE BAY SPB (KTB) 0 NW UTC–9(–8DT) N55°41.28′ W132°32.20′ **KETCHIKAN**
00 NOTAM FILE KTN
WATERWAY NW–SE: 5000X2000 (WATER)
AIRPORT REMARKS: Unattended. Opr area in Thorne Bay. Be alert: sea otters also use SPB ramp/tie–down area.
AIRPORT MANAGER: 907-204-0815
COMMUNICATIONS: CTAF 122.9
RADIO AIDS TO NAVIGATION: NOTAM FILE ANN.
ANNETTE ISLAND (VH) (H) VORW/DME 117.1 ANN Chan 118
N55°03.62′ W131°34.70′ 298° 50.0 NM to fld. 184/21E.
VOR unusable:
000°–100° byd 11 NM blo 12,000′
000°–100° byd 15 NM
000°–100° byd 9 NM blo 6,500′
120°–130° byd 37 NM blo 6,000′
185°–190° byd 40 NM
200°–205° byd 40 NM
213°–221° byd 40 NM blo 8,000′
213°–221° byd 66 NM
222°–226° byd 40 NM blo 12,000′
222°–226° byd 66 NM
227°–286° byd 40 NM
290°–320° byd 32 NM blo 7,000′
290°–320° byd 37 NM blo 9,000′
295°–303° byd 40 NM
304°–306° byd 40 NM blo 7,000′
304°–306° byd 69 NM
316°–320° byd 40 NM
332°–344° byd 40 NM
345°–359° byd 20 NM
DME unusable:
000°–100° byd 11 NM blo 12,000′
000°–100° byd 15 NM
000°–100° byd 9 NM blo 6,500′
120°–130° byd 37 NM blo 6,000′
290°–320° byd 32 NM blo 7,000′
290°–320° byd 37 NM blo 9,000′
345°–000° byd 20 NM
COMM/NAV/WEATHER REMARKS: For a toll free call to Ketchikan FSS dial 1–800–478–3500. For a LC to Juneau FSS dial 789–7380.

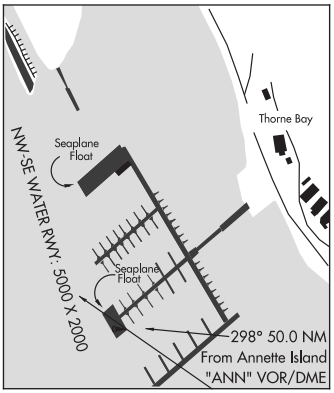

TIBBETTS (See NAKNEK on page 190)