
## FRIENDLY

**POTOMAC AIRFIELD** (VKX)(KVKX) 0 NE UTC–5(–4DT) N38°44.92′ W76°57.36′ **WASHINGTON COPTER**
118 B NOTAM FILE DCA **L–29E, 34F, 36I, A IAP**
**RWY 06–24:** H2665X40 (ASPH) MIRL 0.3% up NE
**RWY 06:** REIL. PAPI(P2L)—GA 5.0° TCH 19′. Thld dsplcd 376′. Trees.
**RWY 24:** REIL. PAPI(P2L)—GA 5.5° TCH 20′. Thld dsplcd 90′. Trees.
**SERVICE:** S4 **FUEL** 100LL **LGT** MIRL Rwy 06–24 opr SS–SR; To ACTVT otr times and ACTVT PAPI Rwy 06 and 24—CTAF. Rwy 06 PAPI cntrln use only. Rotating bcn located 1000′ north of arpt.
**NOISE:** Noise abatement procedures: avoid takeoff 0300–1200Z‡.
**AIRPORT REMARKS:** Attended 1200–0300Z‡. Expect 24 hr surveillance: civil and mil, ground and air. Arpt within Flt Rstrd Zone (FRZ). FRZ pilots must file FRZ scty FP thru 703–771–3476. SFRA or IFR FP does not grant FRZ asp aces. For aces pilot must be pre–apvd thru TSA MD3 program. To apply for FRZ access, see arpt website. Unlimited vehicle access to acft movement areas.
**AIRPORT MANAGER:** 301-248-5720
**COMMUNICATIONS: CTAF/AUNICOM** 122.8
Ⓡ **POTOMAC APP/DEP CON** 124.7 125.65 (DC–FRZ)
**CLEARANCE DELIVERY PHONE:** For CD ctc Potomac Apch at 866-599-3874.
**RADIO AIDS TO NAVIGATION:** NOTAM FILE ADW.
**ANDREWS (L) (L) VORTACW** 113.1 ADW Chan 78 N38°48.43′ W76°51.98′ 240° 5.5 NM to fld. 263/10W.
VOR unusable:
035°–045° blo 2,500′
089°–182°
183°–227° blo 4,000′
230°–236° byd 20 NM
237°–270°
333°–048°
TACAN AZIMUTH unusable:
035°–045° blo 2,500′
220°–280°
295°–310°
DME unusable:
035°–045° blo 2,500′
220°–280°

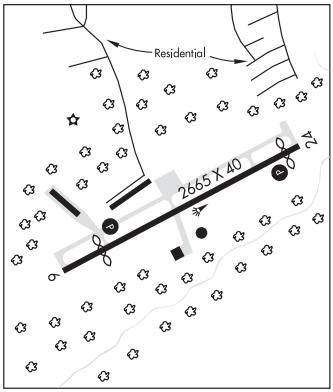


**COMM/NAV/WEATHER REMARKS:** Automated UNICOM; 3 clicks adzy and wx, 4 clicks radio check. Visitors please tune 122.85 for parking instructions and gnd svcs.